

CAMERA SETUP

One camera only:

Shows “always on rear view” & “reverse”
(camera view split)


Connect camera to V2

This setup is useful for utes with canopies for rear view and reverse

- Press button until **AHD2** is shown on screen.
- The top part of the camera view will be “always on rear view”.



- When the reverse trigger is activated, the view will switch to the bottom part of the camera view for “reverse”.

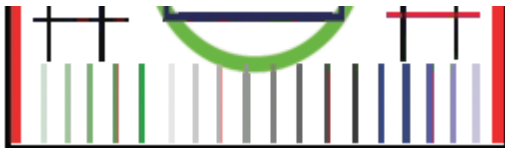


Two cameras connected:

Camera One: V1 “always on rear view”.

Camera Two: V2 “reverse”.

This setup is best for Camera One on a caravan/trailer for rear view and Camera Two on a vehicle for reversing. When Camera One/caravan is disconnected, Camera Two will still operate as your reverse camera.

- Press button until **AHD1** is shown on screen.
- Camera One (V1) will always be on “always on rear view”.

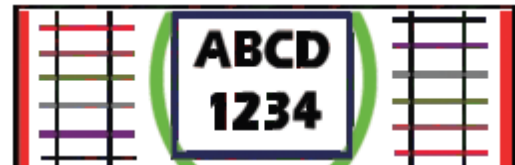

- When the reverse trigger is activated, the screen will switch to **AHD2** (Camera Two, V2), only showing the bottom half of the camera view.

