




1. Install "Ext2Fsd-0.51" drive.


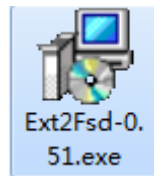


2. When the installation is complete, insert the disk into the computer, run the program, you will see the file system as EXT3 partition, select the partition.

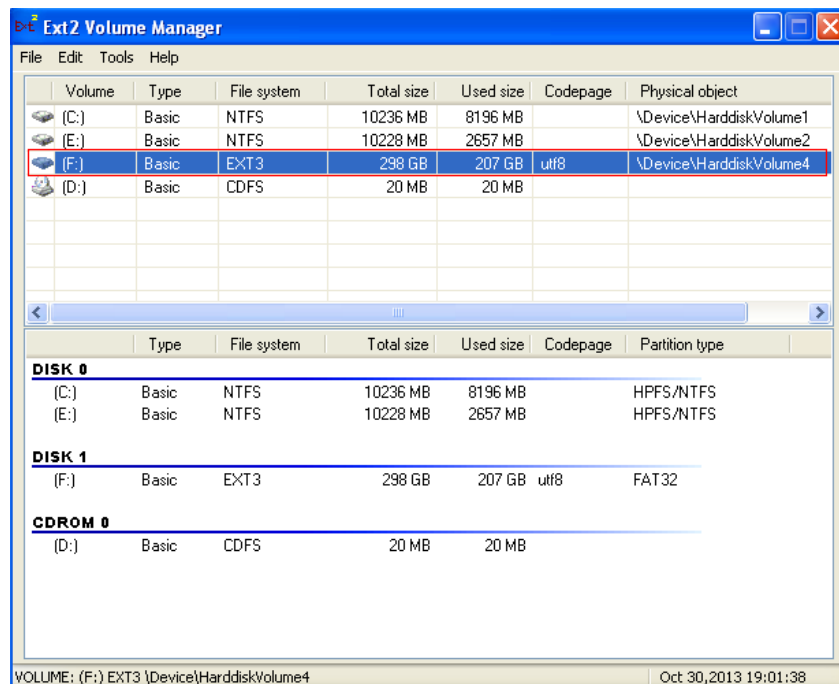

3. Click on "Tools and Settings" --- "Configuring File System Driver", click "Enable", you can choose whether to load the read-only partition, click the "changes and exit."

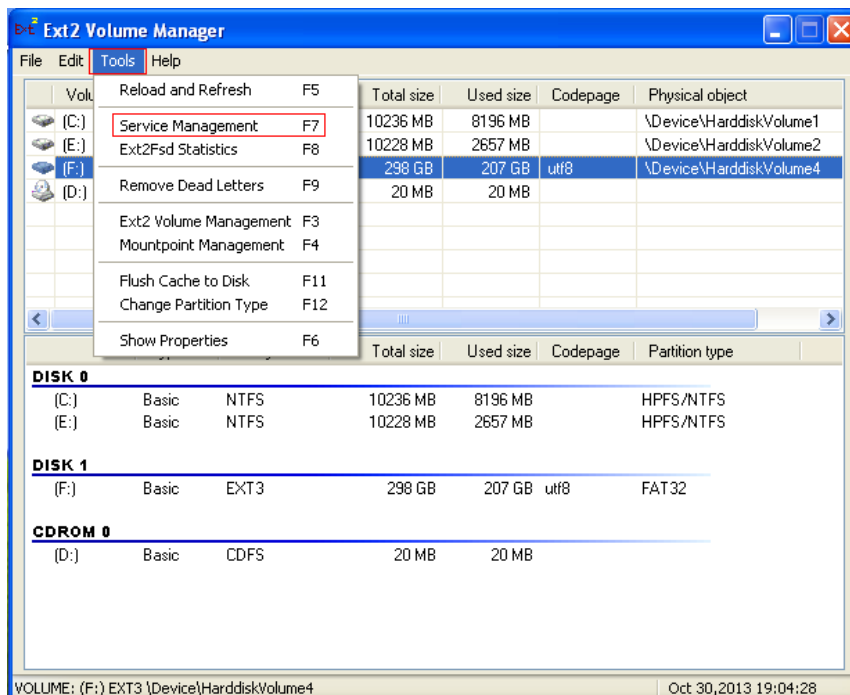

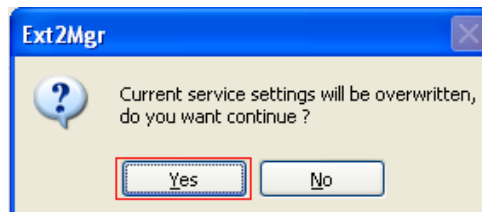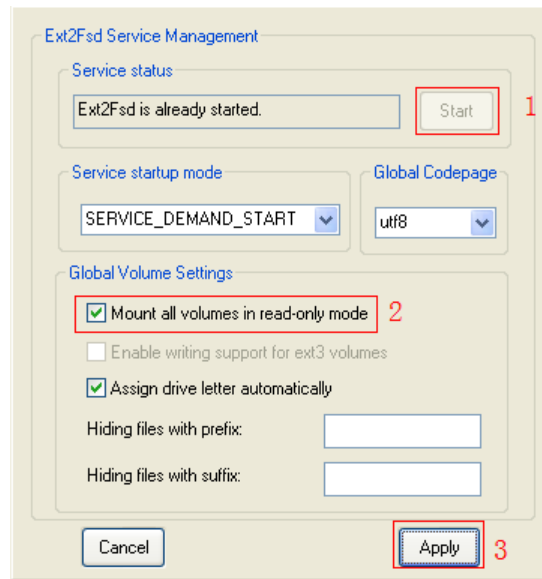

4. OK,you can open the HDD.

